


AgriCAD PS04P




Service Manual

PS04P-FF-01 Main Assembly

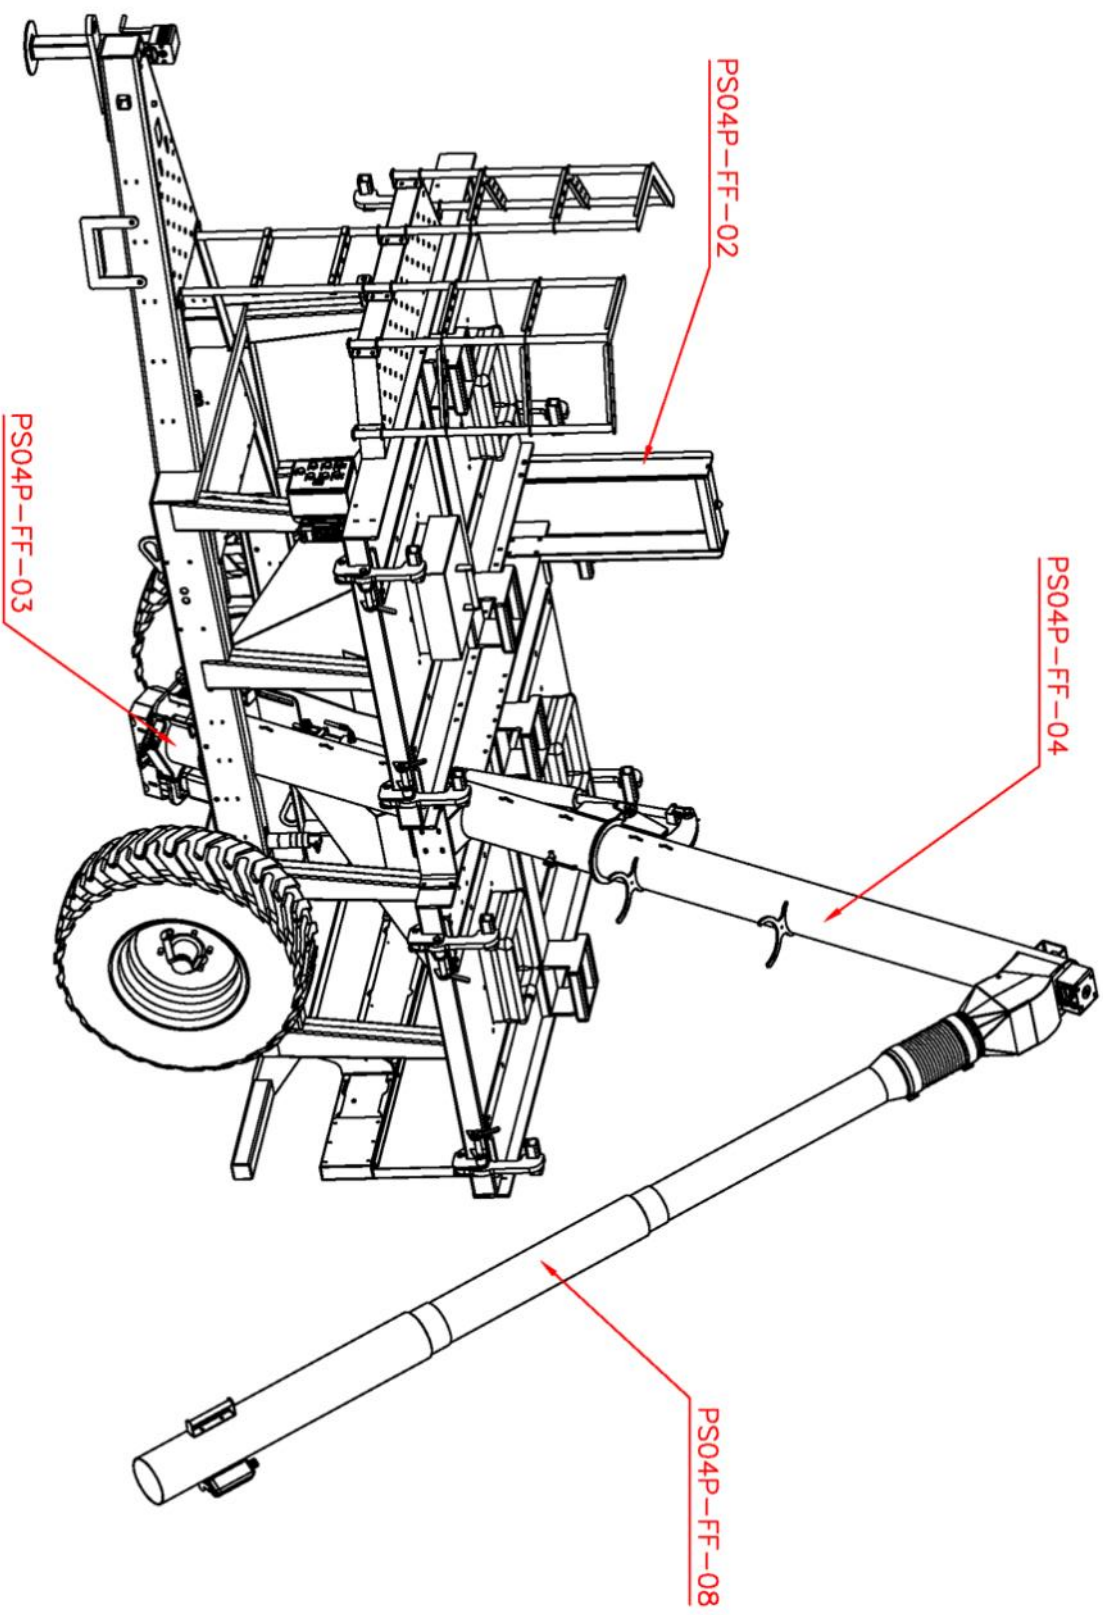


PS04P-FF-02 Chassis Assembly

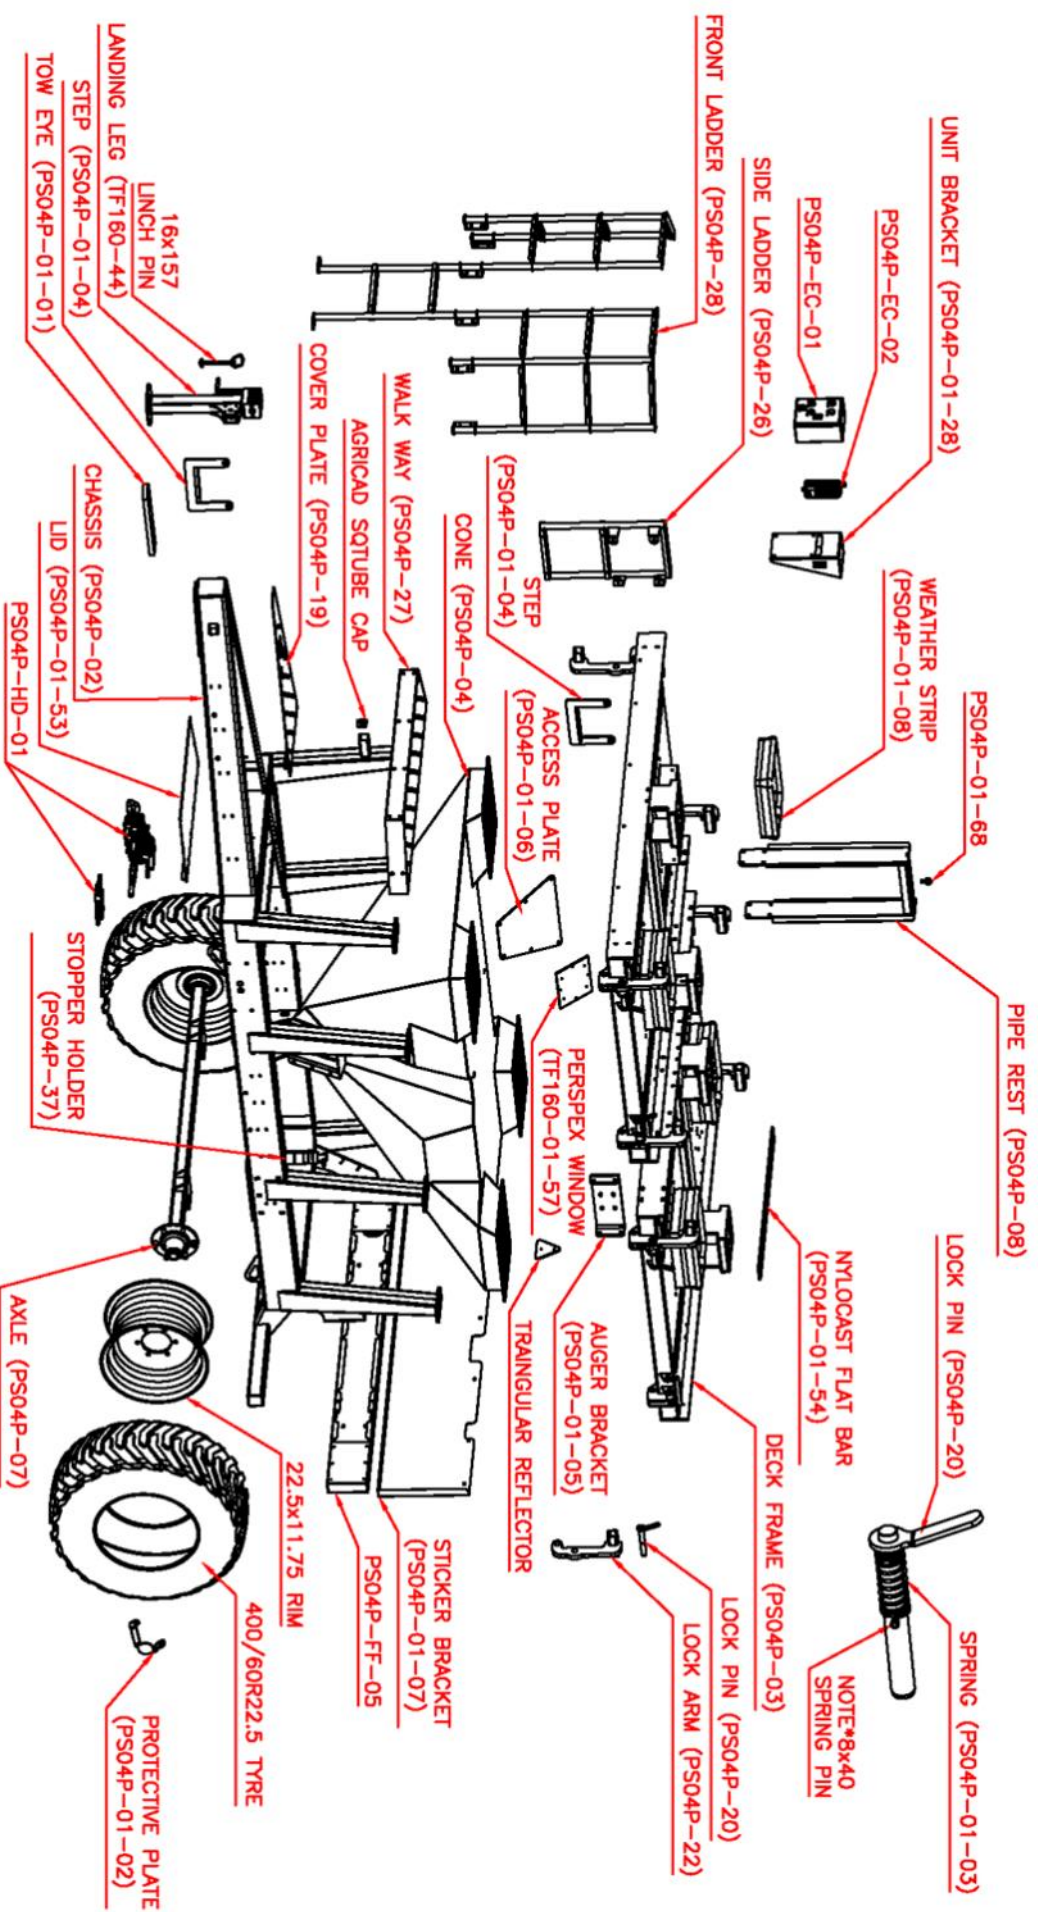


Axle Assembly


SPARE PARTS LIST FOR AXLE:
A70MH600002

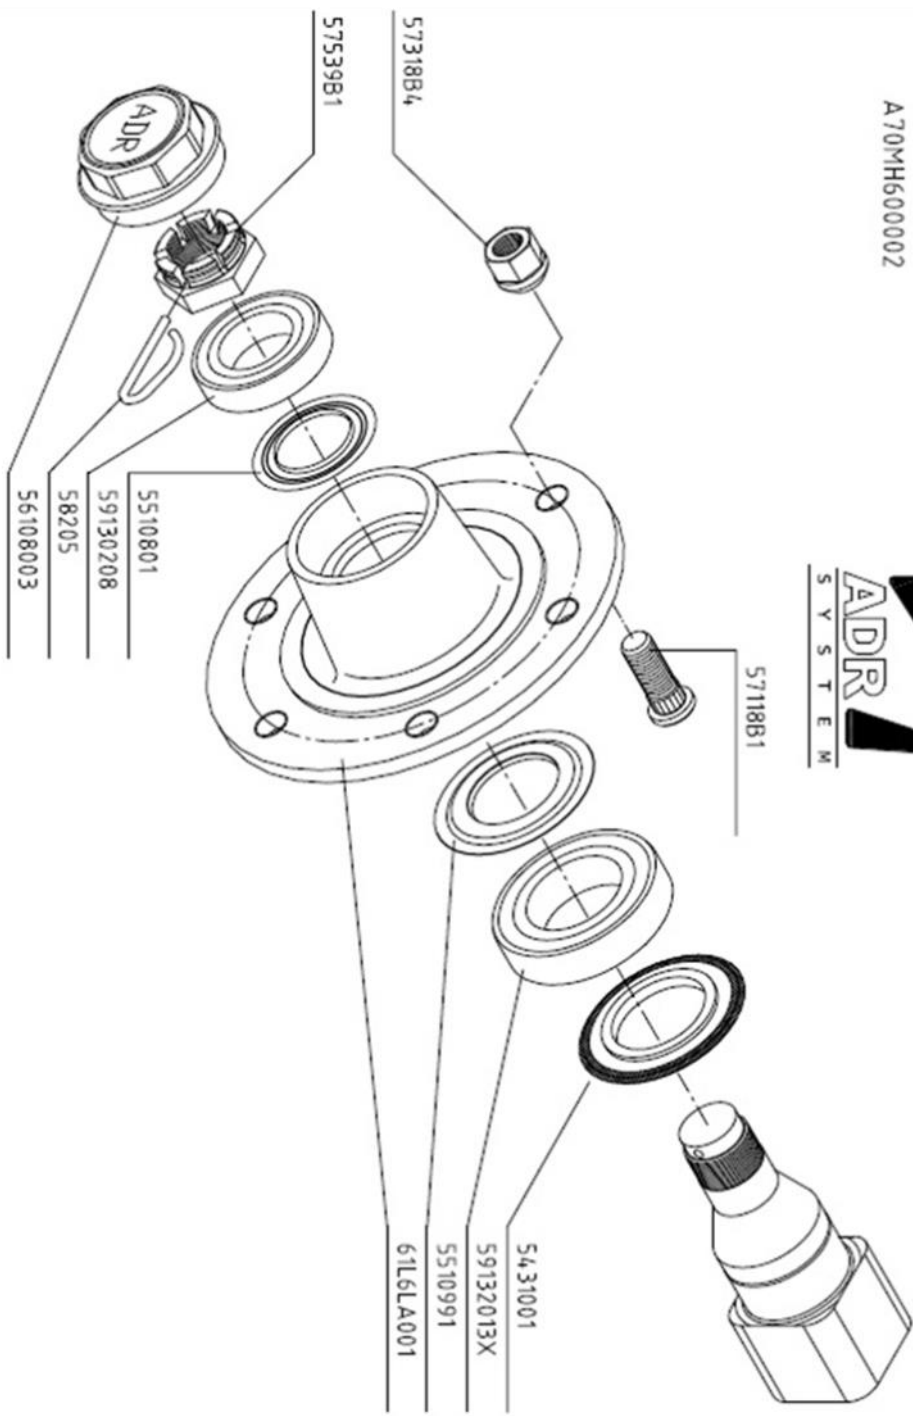


PS04P-FF-03 Bottom Eject Auger Tube Assembly

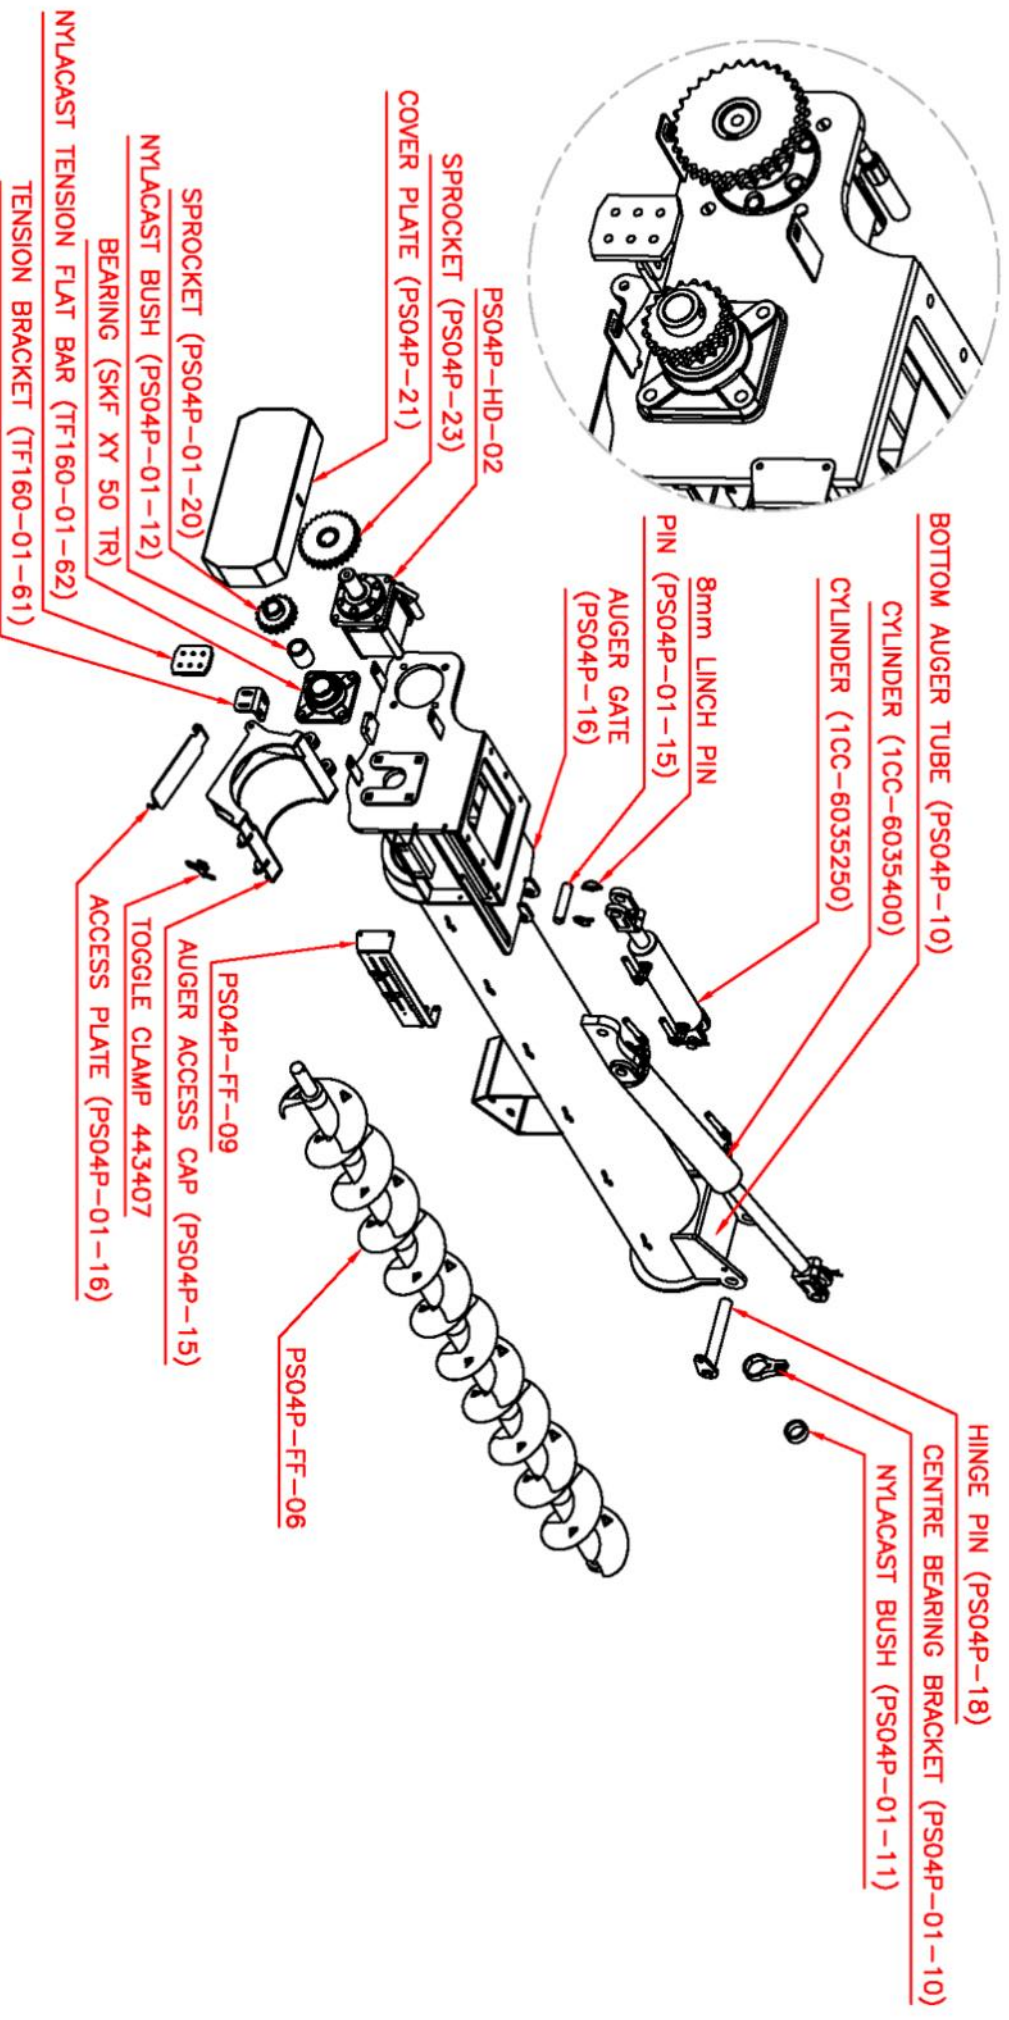


PS04P-FF-04 Top Eject Auger Tube Assembly

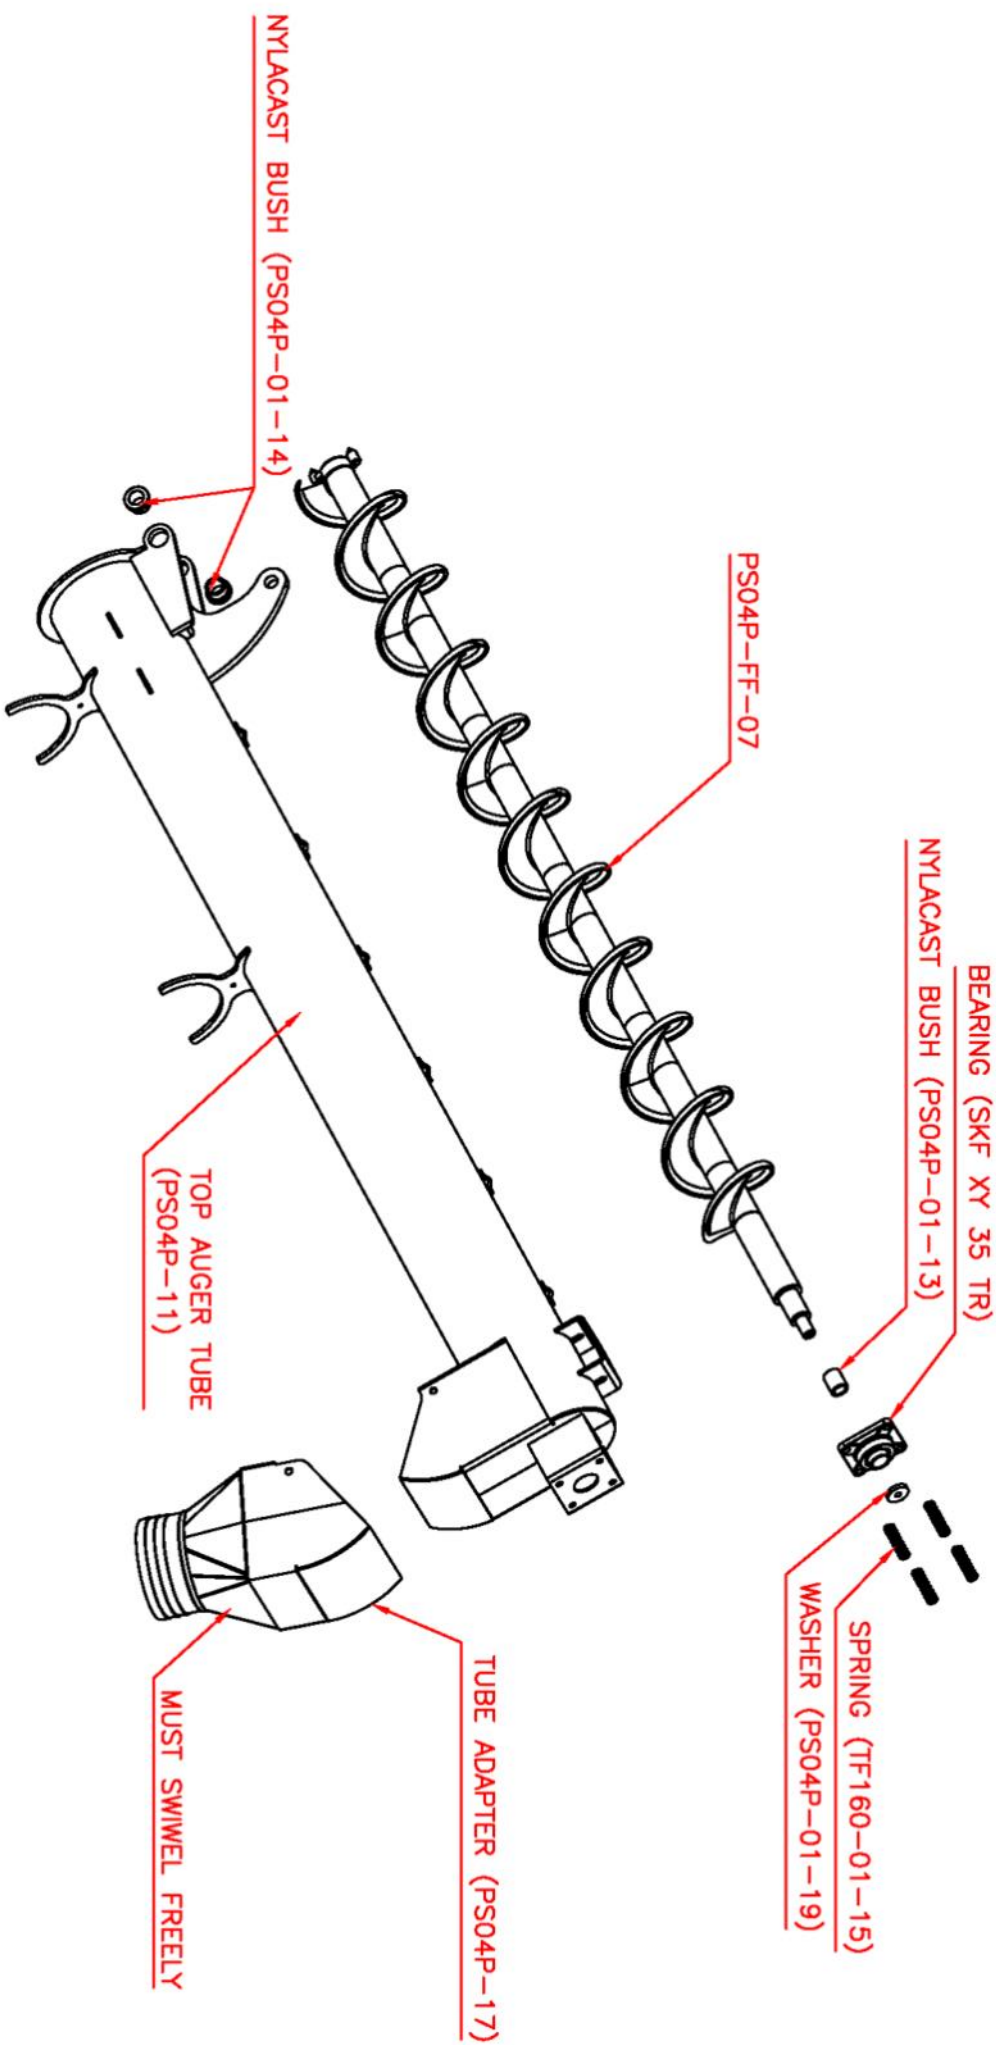


PS04P-FF-05 *Light box Assembly*

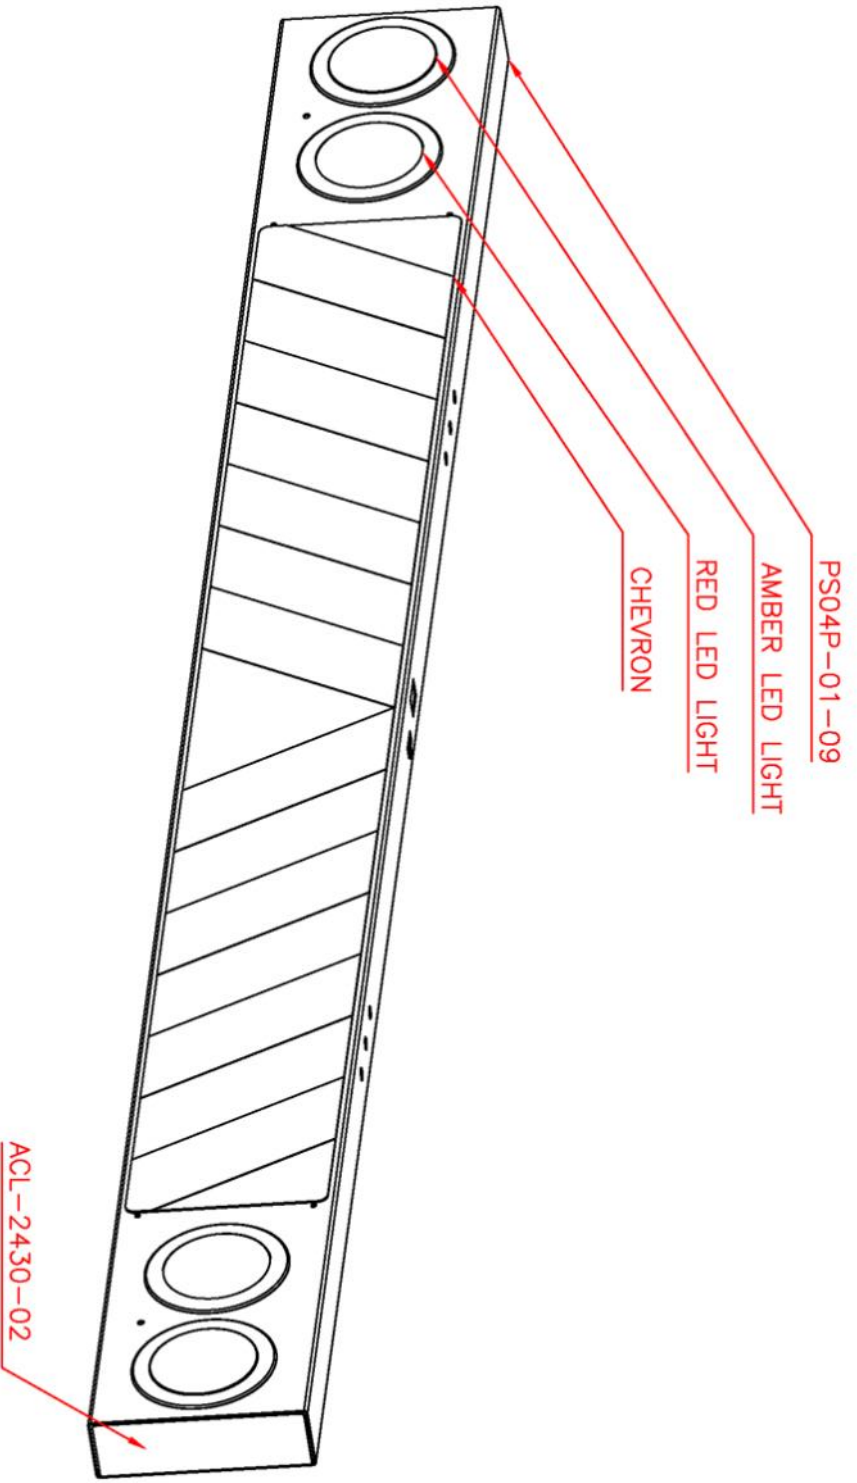


PS04P-FF-06 Bottom Eject Auger Assembly

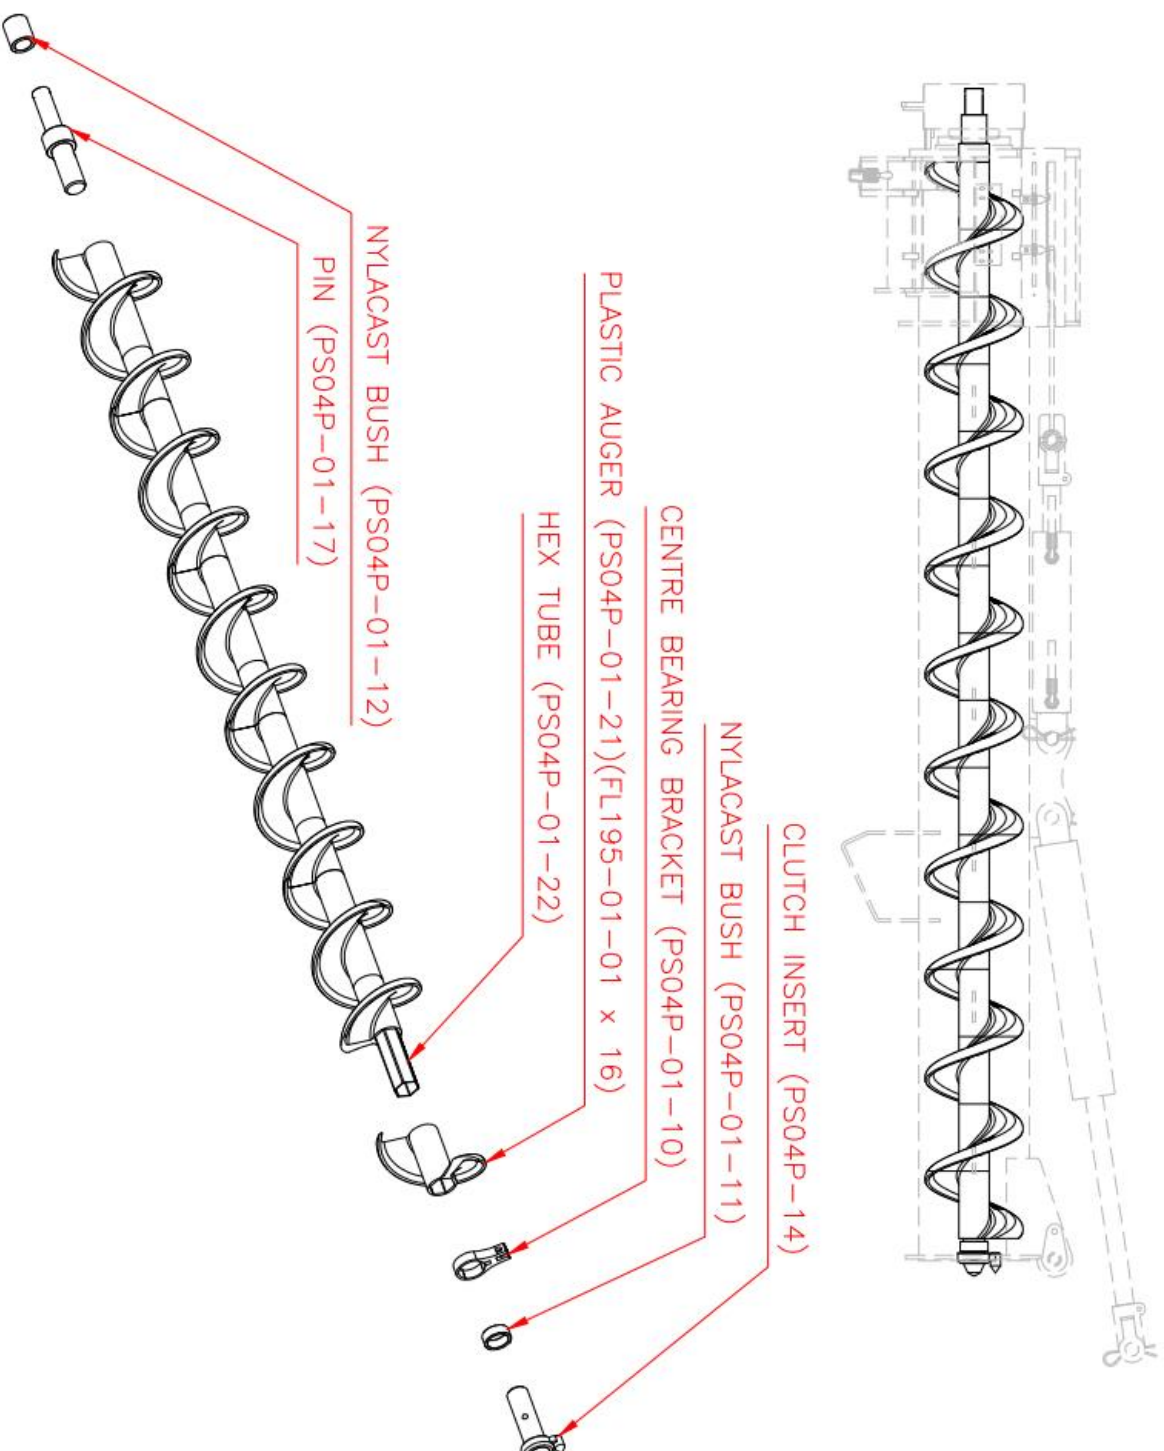


PS04P-FF-07 Top Eject Auger Assembly

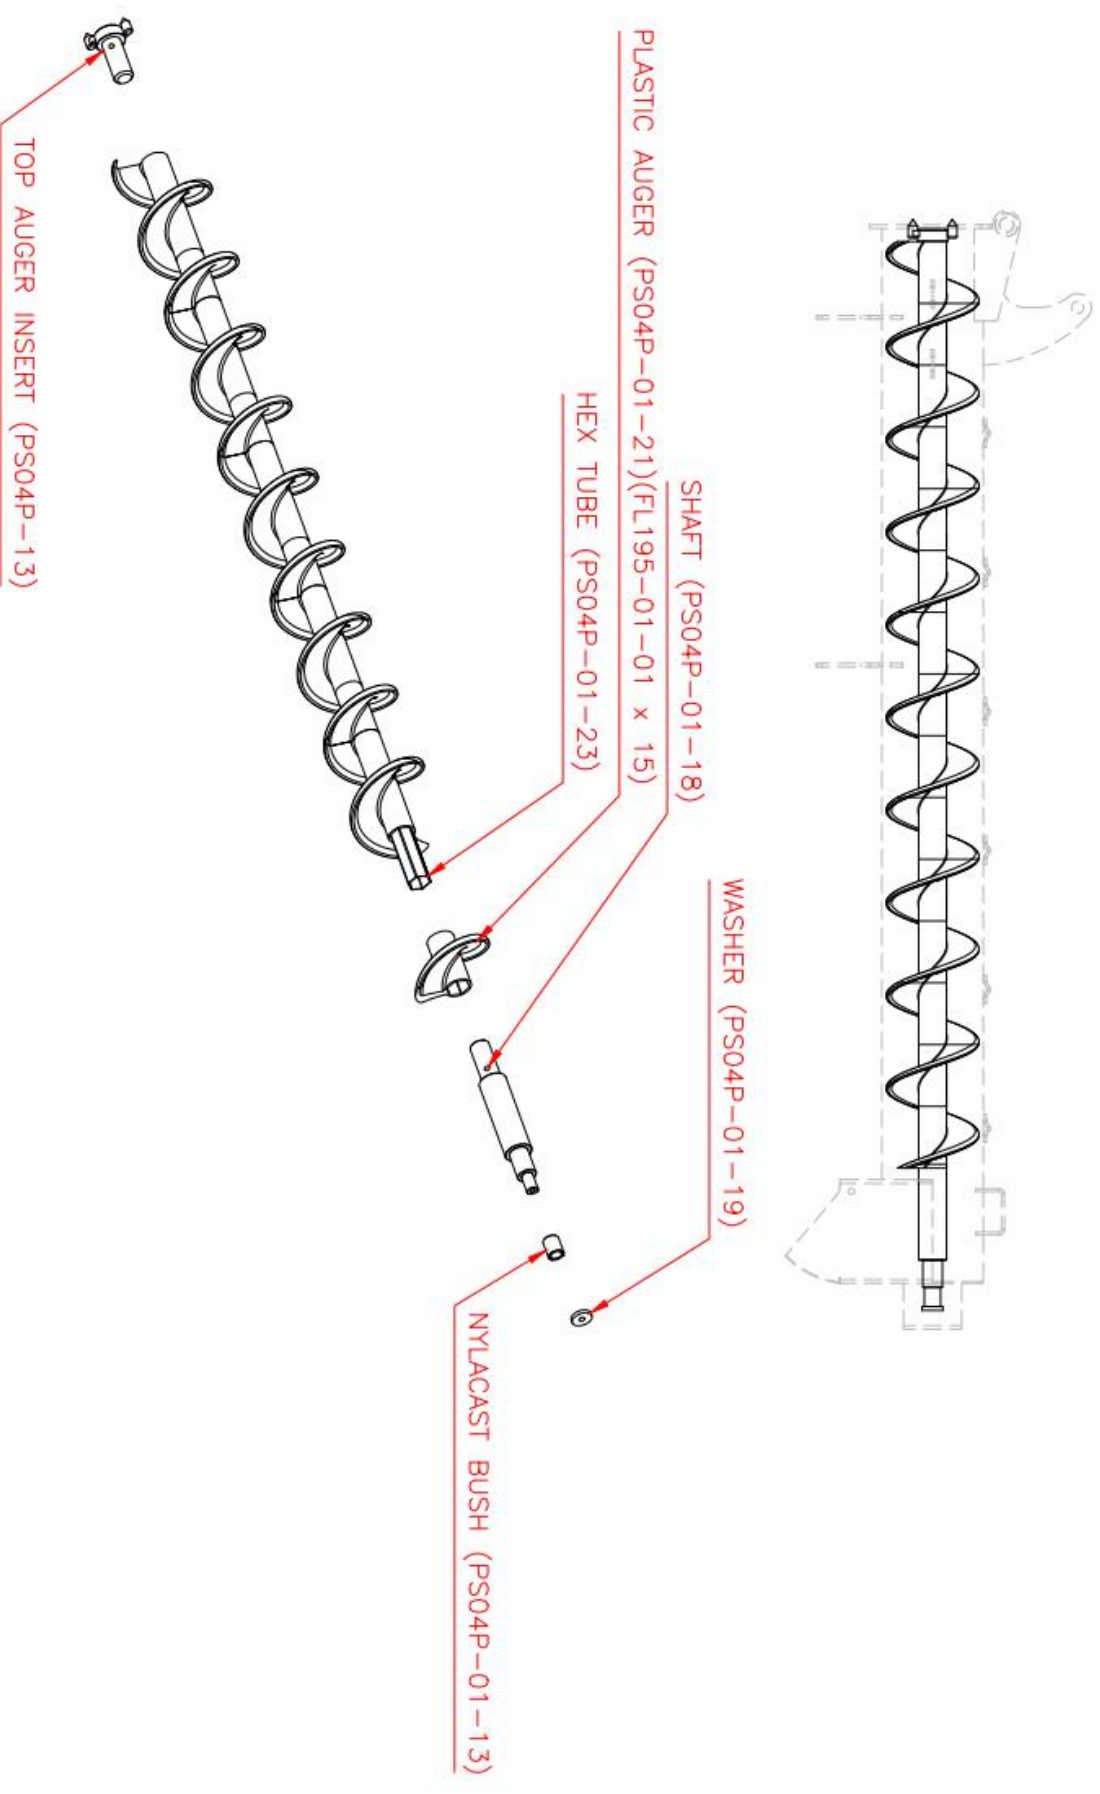

PS04P-FF-08 Telescopic Pipe Assembly

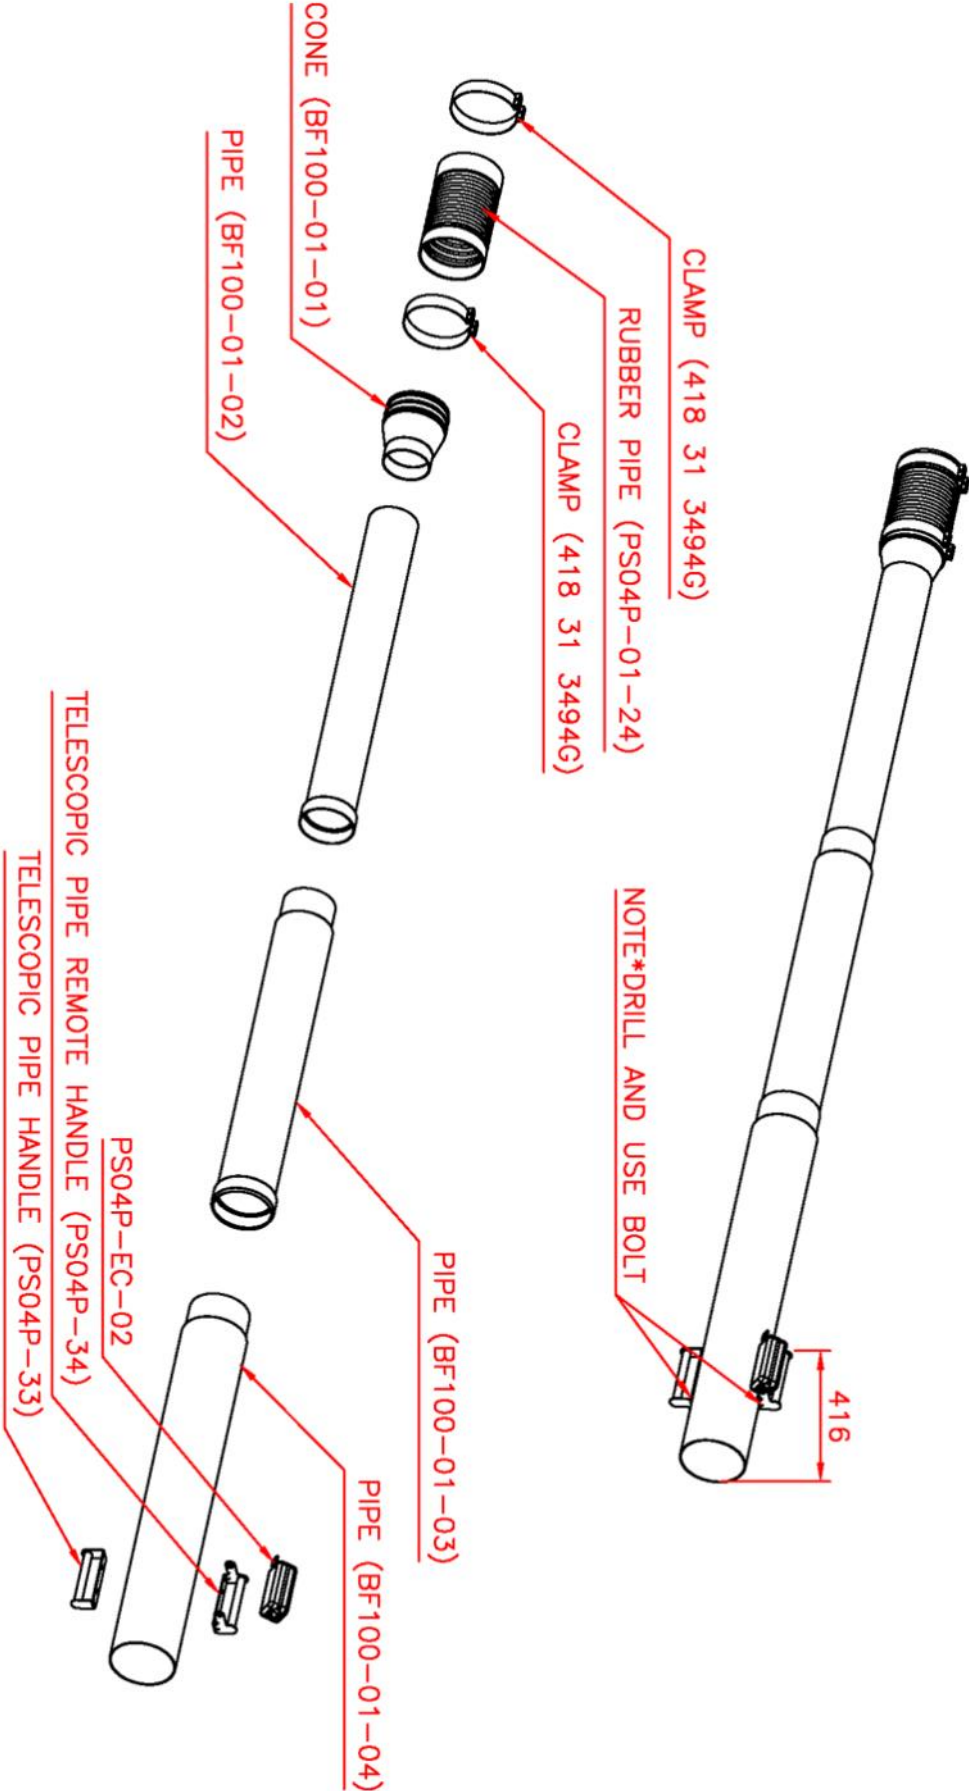

PS04P-FF-09 Gate indicator Assembly

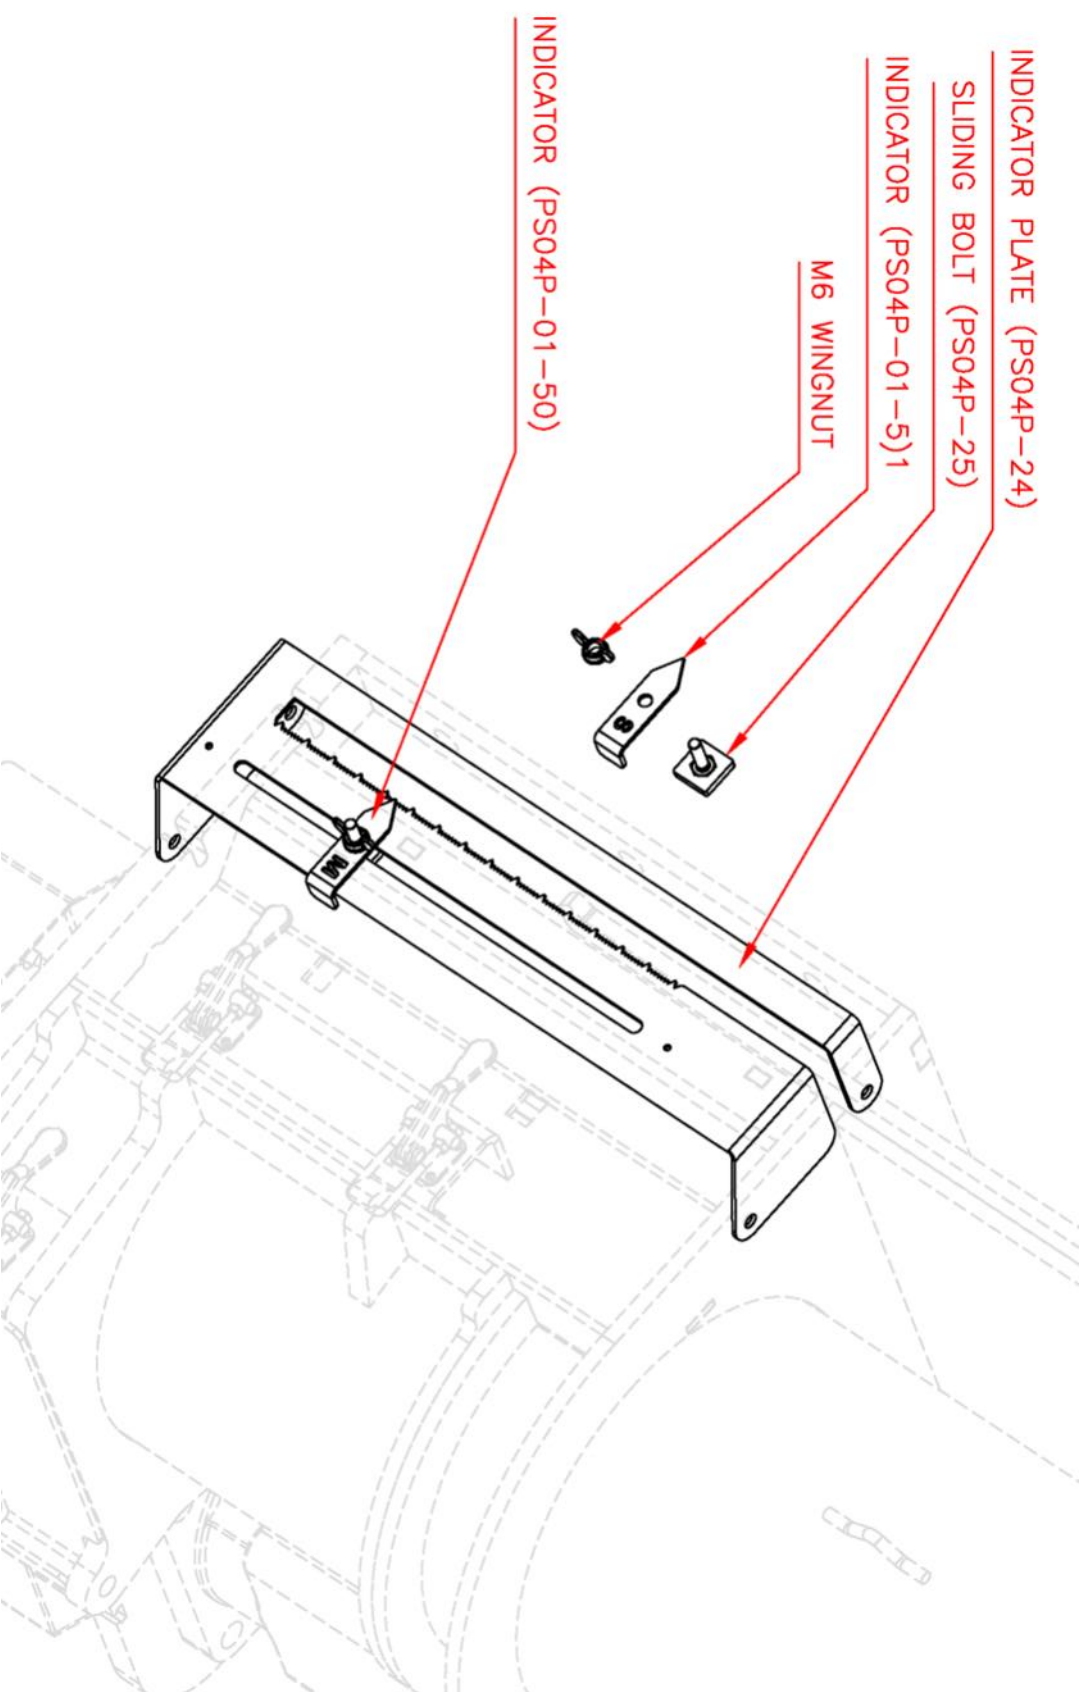

This page was left blank intentionally.

Manufactured in South Africa

for African conditions by

AgriCAD Pty (Ltd)

www.agricad.co.za

Tel: 0861001204

For any assistance with AgriCAD parts email us at

parts@agricad.co.za



AgriCAD © copyright
all rights reserved